

<div>4D多功能水洗電動刮鬍刀</div> <div>使用說明書</div> <div></div>	<div>注意事項</div> <p>在使用本產品前，請仔細閱讀使用說明書並妥善保存，已備日後參考。</p> <ol style="list-style-type: none">1.本產品充電溫度和存放溫度應在5°C到35°C之間。2.確保充電時不會弄濕。3.在自來水下清洗刮鬍刀前，務必將充電器插頭拔掉。4.防水級別為IPX6。 <div></div>	<ol style="list-style-type: none">6. 身體不健全、感官或神經錯亂、或無經驗的人士(包括兒童)7. 除非在其安全負責人的監導或指導下，否則不能使用本產品。請看好兒童，使用他們遠離本產品。8. 刮鬍刀充電時，按下開關按鈕，回到關閉狀態，進行充電。9. 旅行時必須確保將刮鬍刀的保護蓋蓋上，以保護刮鬍刀刀片。10. 如果按下開關刮鬍刀不能工作，請將刮鬍刀內部鬍鬚清洗乾淨。 <div>充電須知</div> <p>充電前確保本產品處於斷電狀態 (整機開關處於關閉狀態) 充電時間為2小時左右。</p> <p>本產品最好不要持續通電24小時以上</p> <p>損壞或磨損刮鬍刀刀頭只能用專用刮鬍刀頭產品更換。</p> <ol style="list-style-type: none">1.將舊的刮鬍刀刀頭零件組從刮鬍刀中拔出(圖14)。2.將新刮鬍刀刀頭組插入刮鬍刀上部(圖14)中，接著將刮鬍刀刀頭組件往下壓，使其裝在刮鬍刀上 (這時會聽到一聲喀) (圖15) <div></div>	<ol style="list-style-type: none">1.將產品充電器插入刮鬍刀內(圖3)。2.將充電器插頭插上。3.充電指示燈亮起(圖4)。4.當電池滿時，充滿指示燈亮起。滿電狀態下，顯示使用時間為99分鐘。充滿電後，將充電器插頭拔出並將本產品的插頭從刮鬍刀中拔出。 <div>產品使用須知</div> <p>刮鬍刀</p> <ol style="list-style-type: none">1.按下開關按鈕(長按3秒鎖定或解鎖)啟動刮鬍刀即顯示刮鬍刀可使用時間。2.將刮鬍刀刀頭零件以直線和圓圖方式在皮膚上快速移動(圖5)。3.使用後將刮鬍刀保護蓋蓋上，避免損壞(圖6)。 <div></div>		<div>4D多功能水洗電動刮鬍刀</div> <div>使用說明書</div> <div></div>	<div>Notes</div> <p>Before using the product, please read carefully the operating instructions and keep properly for future reference.</p> <ol style="list-style-type: none">1. Only the included charger can be used.2. The charger can transform 110-240V to Safety voltage below 3.7V.3. The charger includes a transformer which should not be cut off and replaced with another plug; otherwise, it will lead to serious results.4. If the charger is damaged, it should be replaced with a new one with the original type to avoid the danger.5. The temperature for the product's charge and storage should be between 5°C and 35°C.6. Make sure the charge will not become damp.7. Do unplug the charger before cleaning the shaver with running water.8. The waterproof grade is IPX7. <div></div>	<ol style="list-style-type: none">9. This product cannot be used by physically distempered, sensorially or mentally disordered, or inexperienced persons(including children), unless they are under supervision or instruction by people in charge of their security.10. Take care of children to keep them away from this product.11. When the shaver is charging, Press the switch button back to the off state for charge.12. It's necessary to ensure to put the protective cover on the shaver when you travel to protect the shaver blade.13. Please clean inside beard if the shaver can not work after you press the switch. <div>Charge</div> <p>Make sure the product is power-off before the charge. The charge lasts about 2 hours.</p> <p>It's better for the product not to be connecte d to the power supply for more than 24 hours._ (Remark: When it is full of electricity, Full of instructions lights up.)</p> <div></div>	<ol style="list-style-type: none">1. Insert the product charger into the shaver (Fig 3).2. Plug in the charger.3.The charging indicator lights up. (Fif 4).4. When the battery is full, the indicator light is on. The charging time is 99 minutes. After the full charge,unplug the charger and also pull off the product's plug from the shaver. <div>How to Use Product</div> <p>Shaving</p> <ol style="list-style-type: none">1. Press the button ON/OFF(locked or unlocked in 3 seconds) to start the shaver.It shows that the razor can use time.2. Make the shaver head part move quickly on the skin in straight lines and circles (Fig 5).3. Cover the shaver's protective cover after using, to avoid being damaged (Fig 6).4. It can be used for 30-40 consecutive days. after a full charge. <div></div>
<div>清潔與保養</div> <p>刮鬍刀必須定期或刮鬍刀清洗燈亮起時清洗，確保更好的刮鬍效果。</p> <p>清潔本產品最簡單也是最衛生的方法就是每次用完後水洗刮鬍刀刀頭。</p> <p>使用熱水時務必小心。務必記得檢查水不可過熱，避免傷手。</p> <div>注意:刮鬍刀刀頭或毛髮儲藏室。</div> <ol style="list-style-type: none">1.斷開刮鬍刀電源，接著將充電器插頭拔出並將本產品的插頭從刮鬍刀中拔出。2.打開刮鬍刀刀頭部件(圖7)。3.用水龍頭熱水清洗刮鬍刀刀頭部件和毛髮儲藏室(圖8)。確保刮鬍刀刀頭部件和毛髮儲藏室徹底清洗乾淨。4.沖洗產品表面(圖9)。5.關上刮鬍刀頭部件，甩掉殘留的水滴。 <div></div>	<p>勿用毛巾或紙巾擦拭刮鬍刀刀頭部件，這樣可能會對刮鬍刀刀頭造成損壞。</p> <ol style="list-style-type: none">5.再次打開刮鬍刀刀頭部件，並保持打開狀態，將產品晾乾(圖10)。 <p>您還可以使用使用包裝中提供的刷子，清理毛髮儲藏室。這時可以用水清洗。</p> <div>多功能配件</div> <p>修剪器(圖11) 鼻毛修剪器(圖12) 潔面儀(圖13)</p> <div></div> <div>更換說明</div> <p>刮鬍刀頭一年更換一次，從而實現最佳剃鬚效果。如果未受人為因素損壞，刮鬍刀有較長的使用壽命。</p>	<div>配件</div> <p>提供下列配件:充電座、充電線、3個限位梳、清潔刷、油瓶說明書。</p> <div>環境保護</div> <ol style="list-style-type: none">1.如果丟棄本產品，請勿寫一般家庭垃圾堆放在一起，而是將其交於官方指定環保回收中心(圖16)。2.內置可充電電池包含可能會污染環境物質，因此在丟棄前，必須將電池從本產品中取出或將電池送到官方指定回收中心進行處理。 <div></div>	<div>保固 & 服務</div> <p>保修服務只對正常操作時發生的故障有效，不包括所有人為損壞，如:接線不當，零件使用不當，未按照說明使用操作，運輸期間意外造成的損壞，未經本公司授權的修理和改裝，操作錯誤或疏忽造成的損壞，安裝不當等。本保修服務不包刮配件、輔助設備、運輸及維修人員上服務方面的費用。</p> <div>規格參數與包裝</div> <p>產品:4D水洗電動刮鬍刀 充電時間:2小時 產品電壓:2A 產品電流:5V 包裝尺寸:19.2X8.1X23.6CM</p>		<div>Cleaning & Maintenance</div> <p>To ensure a better shaving effect,Or when the razor cleaning shaver must be cleaned regularly.</p> <p>The easiest and most sanitary way to clean the product is to wash the shaver head part and the whisker storeroom with water each time after using it.</p> <p><u>Do be careful while using hot water. Do remember to check the water is not too hot to avoid harming hands.</u></p> <p>: the shaver head part andthe hair storeroom.</p> <ol style="list-style-type: none">1. Cut off the power supply of the shaver, then unplug the charger and also pull out the product's plug from the shaver.2. Open the shaver head part(Fig 7).3. Clean the shaver head part and the hair storeroom with hot running water(Fig 8). <p>Make sure both of the shaver head part and the hair storeroom be cleaned thoroughly.</p> <div></div>	<ol style="list-style-type: none">4. Wash the product's surface(Fig 9).5. Close the shaver heda part and throw off surplus water. <p><u>Do not wipe the shaver head part with a towel or paper tissues, which may cause damsges to the shaver head.</u></p> <ol style="list-style-type: none">6. Open the shaver head part again and remain so to dry up the product (Fig 10) <p>You can also use the brush included to clean the hair storeroom. Here water should not be used.</p> <p>Multi-functional accessories.</p> <p>trimmer (Fig 11).</p> <div></div>	<div>Change</div> <p>Change the shaver head once a year to get the best shaving effect. The shaver has a long service life if not damaged for human factors. The damaged or abraded shaver head can only be replaced with products shaver head</p> <ol style="list-style-type: none">1. Pull out the old shaver head assembly out of the shaver (Fig 14).2. Insert the flange of the new shaver head assembly into the groove (1) on the shaver's top and then press down the shaver head assembly (2) to mount it on the shaver (a click will be heard) (Fig 15). <div>Accessories</div> <p>The following accessories are included with the product: Charging seat, charger 3 positioning comb, cleaning brush,oil bottle, instruction manual.</p> <div>Environmental Protection</div> <ol style="list-style-type: none">1. To discard the product, please don't put it together with general domestic rubbish heaps but hand it to the officially designated recycle center for the environmental protection (Fig 16). <div></div>	<ol style="list-style-type: none">2. The built-in rechargeable battery contains substances which may pollute the environment, so it must be unloaded from the product or senr to the officially designated recycle center to be disposed before it is discarded. <p><u>The battery should not be unloaded unless it has been used up.</u></p> <ol style="list-style-type: none">1. Unplug the charger and also pull out the product's plug from the shaver.2. Get the shaver to keep running until it stops; then screw off the bolt and open the shaver (Fig 17).3. After taking out the battery please send the local battery battery recycling station. <p><u>Do not plug in the shaver again after unloading the battery.</u></p> <div>Guarantee & Service</div>